




iMac Intel 21.5" EMC 2638 Fan Replacement

Prereq to remove fan after hard drive brackets.

Written By: Sam Lionheart

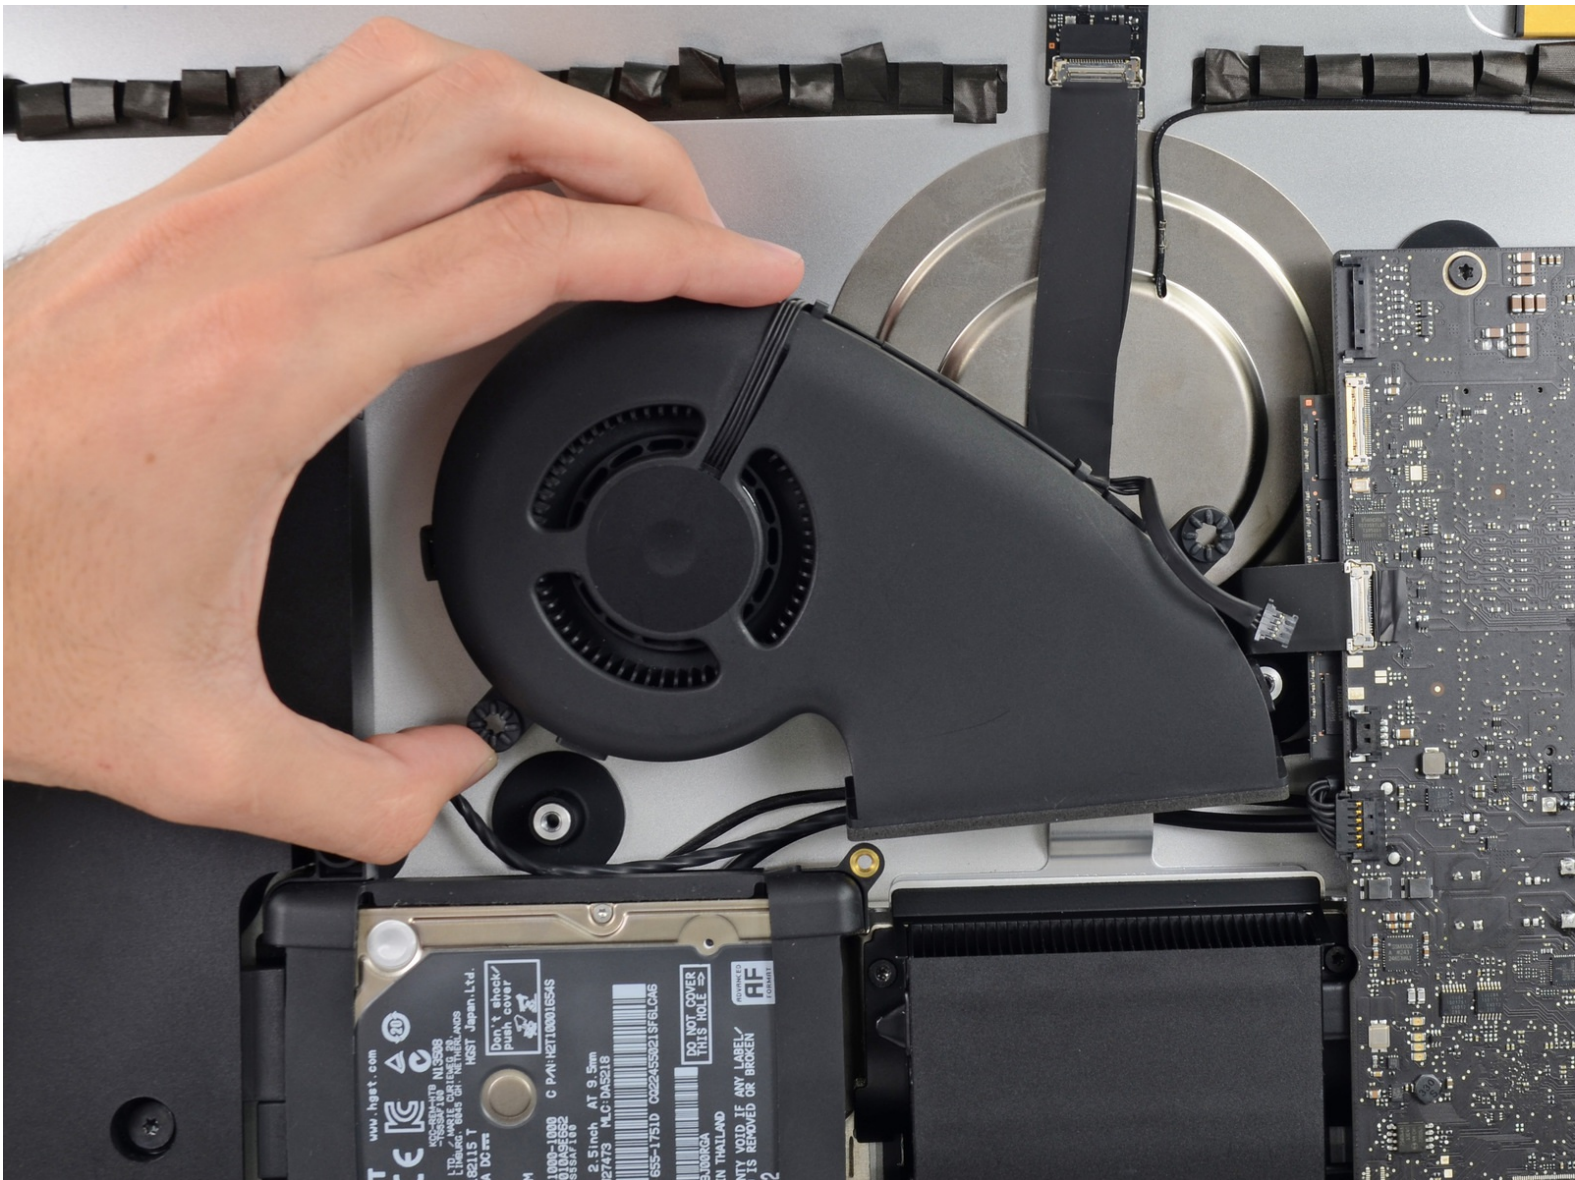

INTRODUCTION



Prereq to remove fan after hard drive brackets.



TOOLS:


- [T10 Torx Screwdriver](#) (1)
-

Step 1 — Fan

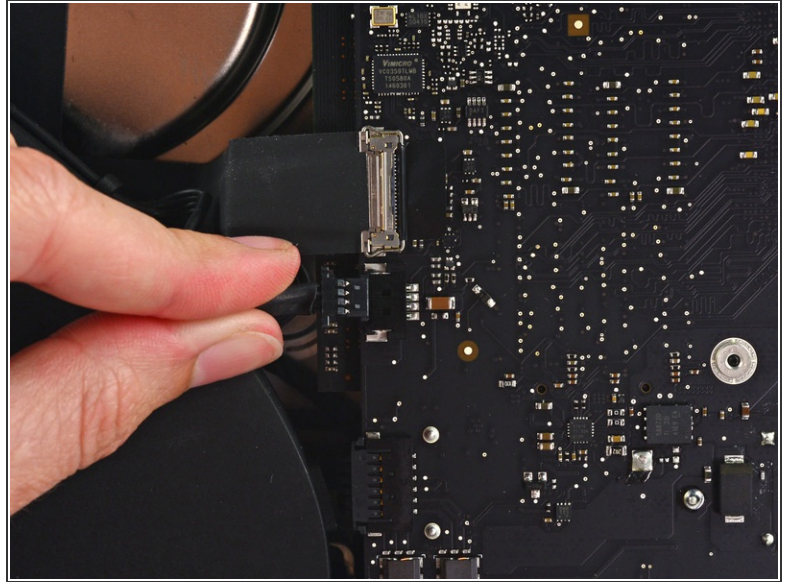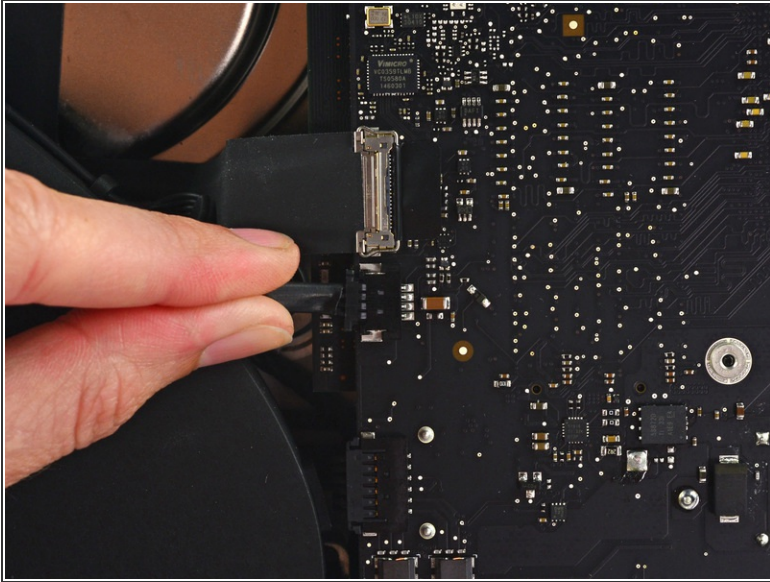



- Gently pull the fan cable connector straight away from its socket on the logic board.

Step 2

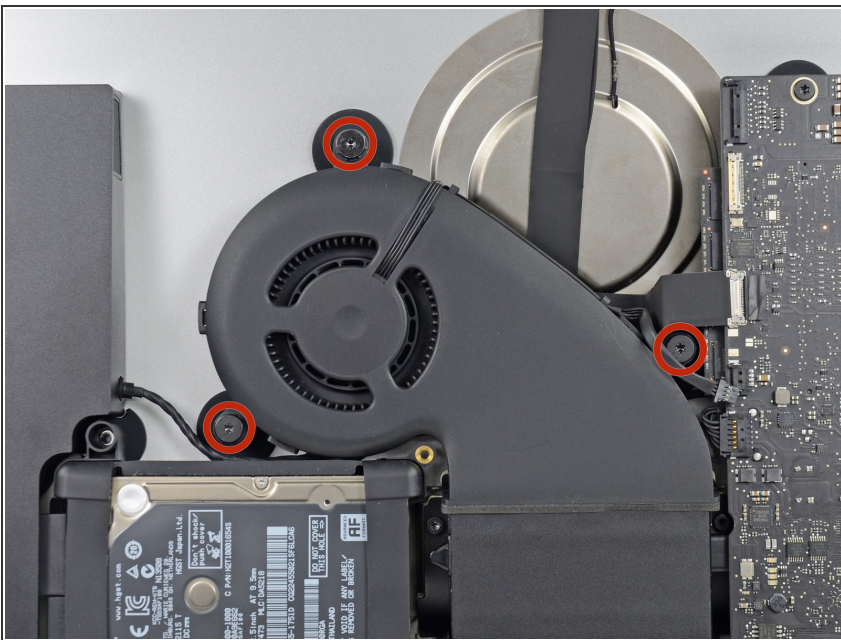

- Remove the three 12.3 mm T10 shoulder screws securing the fan to the rear enclosure.

Step 3

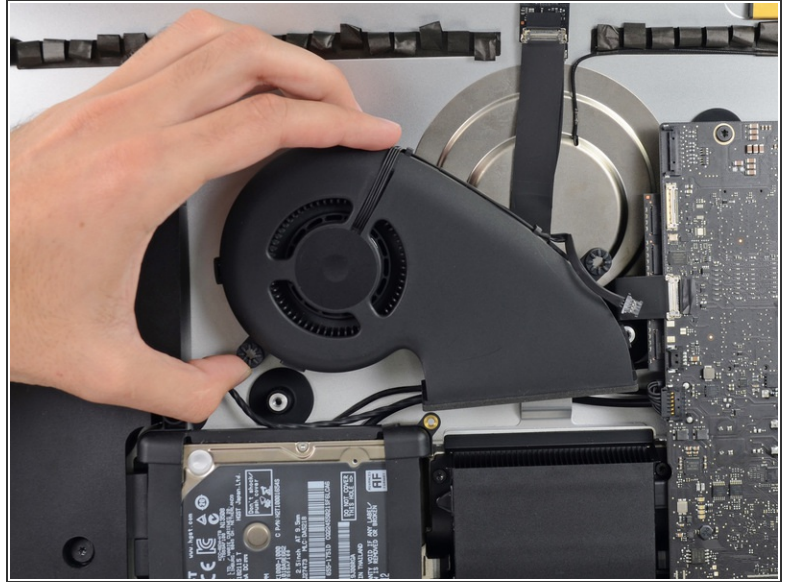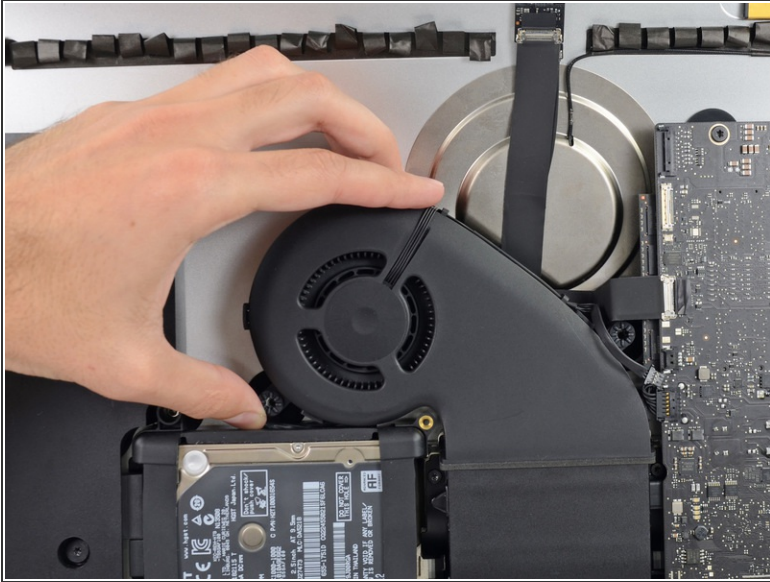

- Remove the fan from the iMac.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 01:55:18 AM.